

The Box för GROHE inbyggnadsblandare med CC Höganäs Foliesystem G12-b / V12-3b
THE BOX for GROHE concealed thermostats with CC Höganäs Foliesystem G12-b / V12-3b

SE	FI	EN
<p>Kontrollera att Boxen med prefabricerad foliefläns är hel och att inga delar av den prefabricerade folien är skadad. Om så är fallet ska Boxen bytas ut.</p> <p>Arbetsgång</p> <p>1 - Applicera CC Höganäs FB 44 tublim på ramens prefabricerade foliefläns. Sprid ut limmet med en fintandad limspridare.</p> <p>2 - Applicera CC Höganäs FB7 folielim på övrig väggyta.</p> <p>3 – Montera CC Höganäs Folie. Överlappa ramens prefabricerade foliefläns hela vägen.</p> <p>2.</p>		<p>Ensure that the box and its prefabricated foil is intact, and and that no parts of the foil are damaged. In case of any damages, the box must be replaced.</p> <p>Procedure</p> <p>1 - Apply CC Höganäs FB 44 tube glue on the frame's prefabricated foil flange. Spread the glue out using a fine tooth glue spreader.</p> <p>2 - Apply CC Höganäs FB7 foil glue on remaining wall surface.</p> <p>3 - Put up CC Höganäs Foil. Overlap with the frame's prefabricated foil flange all the way.</p> <p>3.</p>



OBS!
 Väggmaterialet skall uppfylla gällande
 branschregler.

4 - Tryck ut folien med en plastspackel och säkerställ att inga veck eller blåsor uppstår.

5 – Förslut skarven mellan väggfolien och folieflänsen med CC Höganäs FB 44 Tublim.

6 – Förslut skarven mellan ramens plåtfläns och den prefabricerade folien med CC Höganäs FB 44 Tublim (2 strykningar).

4.



OBS!
Säkerställ att inga veck eller blåsor uppstår.

Övrig väggyta monteras enligt CC Höganäs Foliessystem anvisning.


För mer info besök:
www.cchoganas.se

4 - Smooth out any bubbles using a plastic putty knife.

5 - Seal the seam between the wall foil and the foil flange using CC Höganäs FB 44 tube glue.

6 - Seal the seam between the frame's metal flange and the prefabricated foil using CC Höganäs FB 44 tube glue.

6.

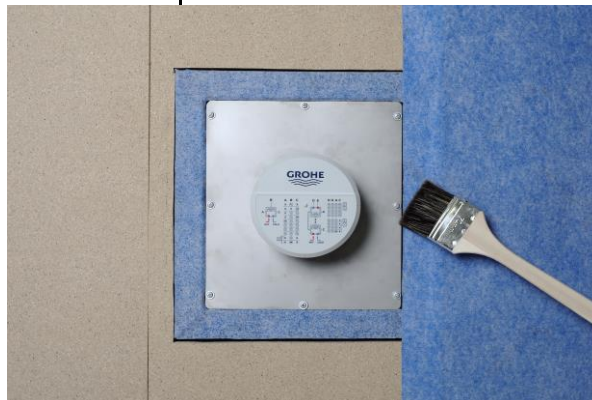

Fit the remaining wall surface according to the CC Höganäs Foil system instructions.

For more info visit:
www.cchoganas.se

**RI
SE**

C900126



Höganäs

vatten
täta
våtrum

Byggkeramikrådet