


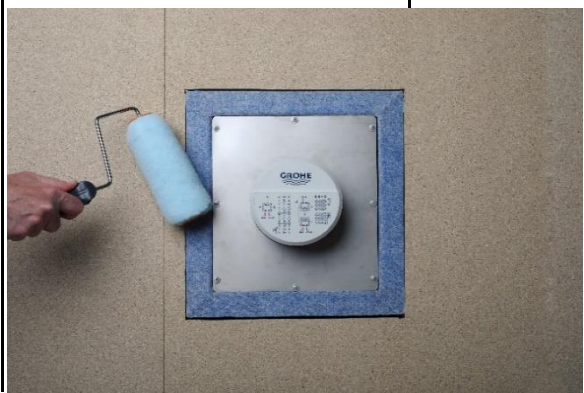

The Box för GROHE inbyggingsblandare med Mapeguard WP90 samt WP200
The BOX for GROHE concealed thermostats with Mapeguard WP90 and WP200

SE	FI	EN
<p>Kontrollera att Boxen med prefabricerad foliefläns är hel och att inga delar av den prefabricerade folien är skadad. Om så är fallet ska Boxen bytas ut.</p> <p>Förarbete Prima hela väggytan med Primer Eco alternativt EcoPrim Grip.</p> <p>Arbetsgång 1 - Applicera Mapei Mapeguard WP Adhesive på ramens prefabricerade foliefläns.</p> <p>2 - Applicera Mapei Mapeguard WP Adhesive på övrig väggyta.</p> <p>3 - Applicera Mapei Mapeguard WP90 eller Mapei WP 200. Överlappa ramens prefabricerade foliefläns hela vägen.</p> <p>2.</p>		<p>Ensure that the box and its prefabricated foil is intact, and and that no parts of the foil are damaged. In case of any damages, the box must be replaced.</p> <p>Preparatory work Prime the entire wall surface using Primer Eco or EcoPrim Grip</p> <p>Procedure 1 - Apply Mapei Mapeguard WP Adhesive on the frame's prefabricated foil flange.</p> <p>2 - Apply Mapei Mapeguard WP Adhesive on remaining wall surface.</p> <p>3 - Apply Mapei Mapeguard WP90 or Mapei WP 200. Overlap with the frame's prefabricated foil flange the entire way.</p> <p>3.</p>
		
 <p>OBS! Väggmaterialet skall uppfylla gällande branschregler.</p>		

4 -Tryck ut folien med en plastspackel och säkerställ att inga veck eller blåsor uppstår.

5 – Förslut skarven mellan väggfolien och folieflänsen med Mapei Mapeguard WP Adhesive.

6 – Förslut skarven mellan ramens plåtfläns och den prefabricerade folien med Mapei Mapeguard WP Adhesive (2 strykningar).


4.

4 - Smooth out any bubbles using a plastic putty knife.

5 - Seal the seam between the wall foil and the foil flange using Mapei Mapeguard WP Adhesive.

6 - Seal the seam between the frame's foil flange and the prefabricated foil using Mapei Mapeguard WP Adhesive. (2 layers)

6.

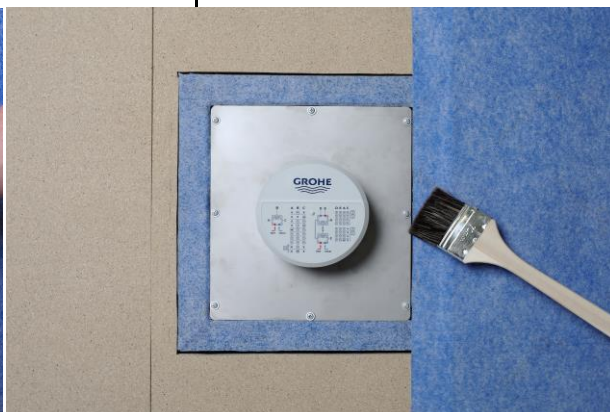

OBS!
Säkerställ att inga veck eller blåsor uppstår.

OBS. Säkerställ att alla skarvar försluts.

För mer info besök:
www.mapei.se

Make sure all seams are sealed.

For more info visit:
www.mapei.se

**RI
SE**

C900126

